


AY03 Installation Diagram

Support to adjust the SWR by up and down the distance ①

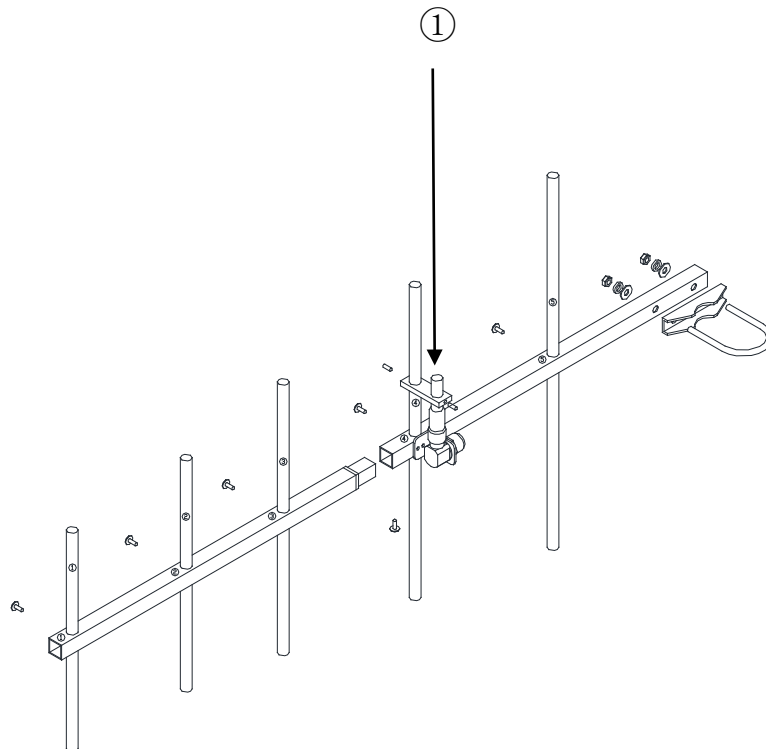

Note:

1. Don't cote it any paint to prevent interference with transmission and reception.
2. AY03 is a horizontal directional transmission. It can be used at an elevation Angle for environmental needs.